
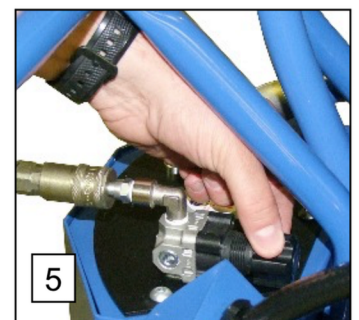


# Mobile AdBlue Dispenser

Product code : 2129-027

- 1 Insert Uptake pipe assembly into drum and fully tighten
  - 2 Connect pump inlet hose assembly (Fully engage cams in vertical position by pulling up the rings)
  - 3 Connect airline
  - 4 Remove blanking cap from drum and insert nozzle
  - 5 Operate trigger to prime the unit. Release trigger and place in holster. Refit the blanking cap
  - 6 Insert hose into vehicle filler neck - press reset button on meter to zero before use
  - 7 Push nozzle completely into tank (with orange sleeve removed)
- Fully squeeze trigger to operate when full.  
Do not release trigger until the nozzle shuts off  
Holster the nozzle and disconnect

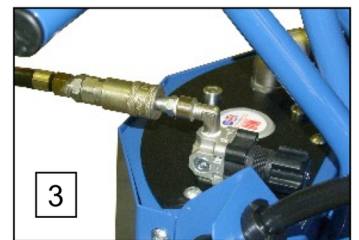

Push orange sleeve over nozzle to bulk dispense into containers. This must be removed when dispensing into the vehicles AdBlue tank. After a period of time, crystallised AdBlue may form on the tip of the nozzle, this can be stripped and washed with warm soapy water

